








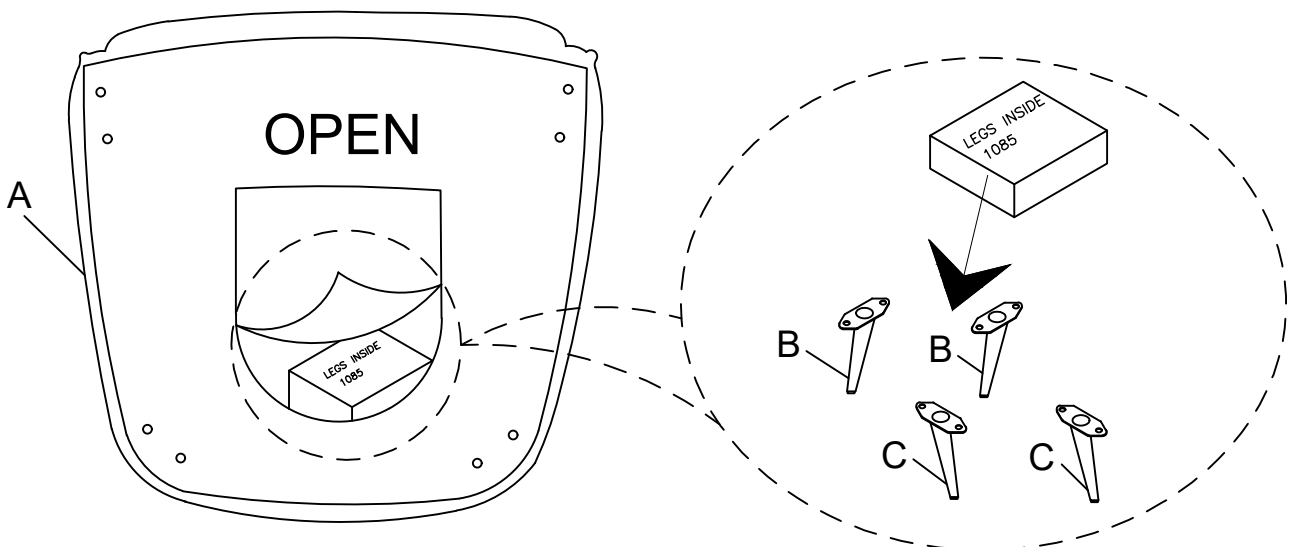


Legs and hardware are stored inside the seat, please take out for assembly


Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

| PART | DRAWING | DESCRIPTION | QTY | PART | DRAWING | DESCRIPTION | QTY |
|------|---|------------------------|-------|------|--|------------------------|-------|
| A |  | NASHVILLE ACCENT CHAIR | 1 PC | 1 |  | BOLT (Ø5/16" *1-1/4") | 8 PCS |
| B |  | LEG B | 2 PCS | 2 |  | SPRING WASHER (Ø5/16") | 8 PCS |
| C |  | LEG C | 2 PCS | 3 |  | FLAT WASHER (Ø5/16") | 8 PCS |
| | | | | 4 |  | ALLEN KEY (M4) | 1 PC |


STEP 1:



STEP 2:

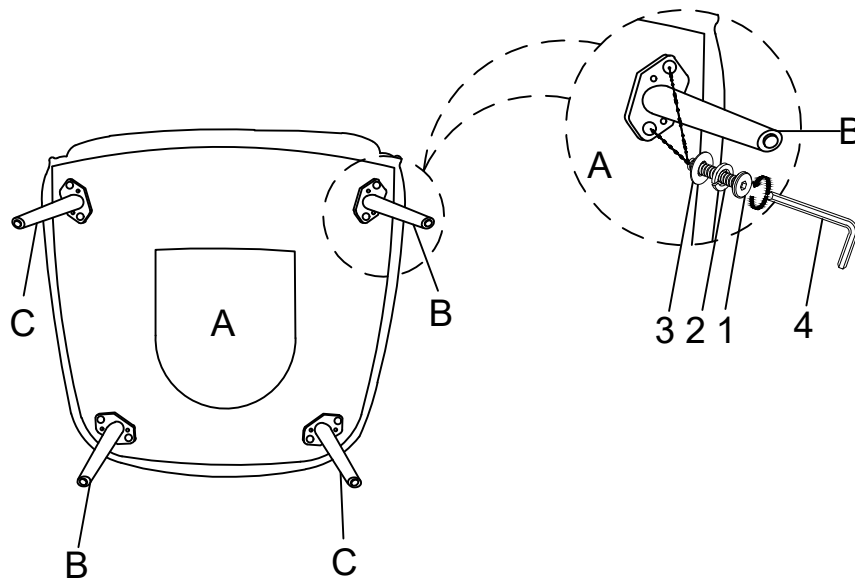

COMPLETED

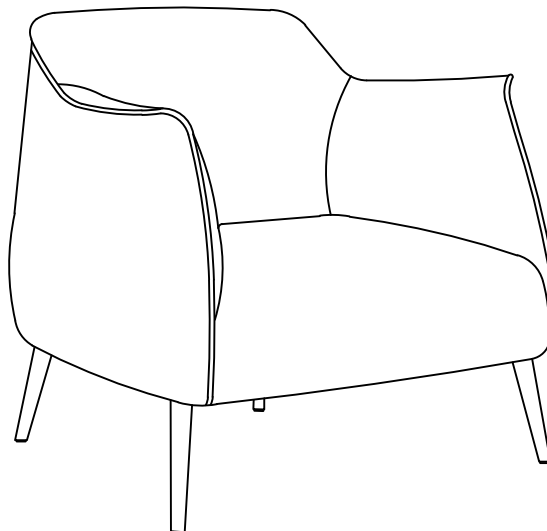

Care Instruction for Boucle Furniture:

In order to maintain the original appearance of your Boucle Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Boucle.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.